

# Saunacore Sauna Heater Specifications

<b>SE, SV, ULT, ELITE R Series:</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7.5</b>	<b>9</b>	<b>10.5</b>
Amps, 208v/1ph	9.6	14.4	19.2	24	28.8	36	43.3	50.5
Amps, 208v/3ph	-	-	-	-	16.7	20.9	25	29.2
Amps, 240v/1ph	8.4	12.5	16.7	20.8	25	31.3	37.5	43.8
Cubic Feet Coverage	100	150	200	250	300	375	450	525
Wire Size, 240v/1ph	14	12	12	10	10	8	8	6
Wire Size, 208v/3ph	-	-	-	-	12	12	12	8

<b>Standard HD, ULT C6 &amp; Elite:</b>	<b>9</b>	<b>10.5</b>	<b>12</b>	<b>15</b>	<b>18</b>	<b>21</b>
Amps, 208v/1ph	43.3	50.5	57.6	-	-	-
Amps, 208v/3ph	25	29.2	33.4	41.8	50	58.4
Amps, 240v/1ph	37.5	43.8	50	-	-	-
Cubic Feet Coverage	450	525	600	750	900	1050
Wire Size, 240v/1ph	8	6	4	-	-	-
Wire Size, 208v/3ph	12	8	8	6	6	4

**NOTE: All electrical work including hook-up must be done by a licensed electrician. Failure to do so will void your Saunacore heater warranty. Wire sizes above are to be used as a general guide, as your electrician will be familiar with your area's electrical codes and the specifics of your installation.**